
# datavideo

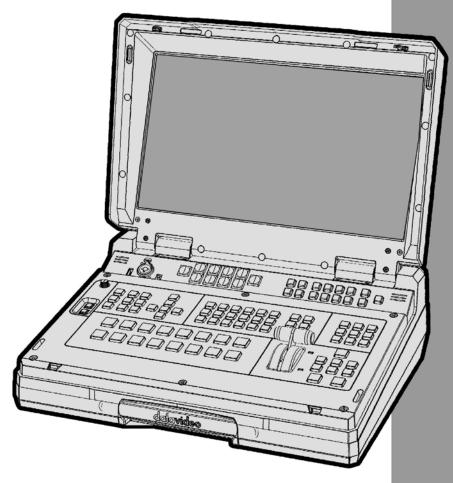

PORTABLE VIDEO STUDIO
HS-2200

**Instruction Manual** 

# **Contents**

FCC COMPLIANCE STATEMENT	4
WARNINGS AND PRECAUTIONS	4
WARRANTY	5
Standard WarrantyTwo Year Warranty	
DISPOSAL	5
1. REAR PANEL	6
1.1 REAR PANEL CONNECTIONS	7
2. CONTROL PANEL	
2.1 Keyboard Controls	
3. INTERCOM & MONITOR CONTROL PANEL	
3.1 Intercom Function	
3.2 Monitor Function	
4. MONITOR MENU OPTIONS	
4.1 MAIN MENU	
4.1.1 MAIN ADJUST	
4.1.2 COLOR	
4.1.3 Information	20
4.1.4 Special Function	20
4.1.5 Factory Reset	21
4.2 MONITOR FIRMWARE UPDATE PROCEDURE	21
5. MENU OPTIONS	22
6. HOW TO USE THE CG-200 SOFTWARE WITH HS-2200	25
7. HS-2200 VIDEO LAYERS	28
7.1 PICTURE IN PICTURE FUNCTION	29
7.1.1 PIP Settings	29
7.1.2 PIP Preset and PIP Program	29
7.1.3 Assigning a video source input to a PIP	29
7.2 DSK Function	
7.2.1 DSK Settings	
7.2.2 DSK PVW and DSK PGM	
7.2.3 Assigning an input to a DSK PVW channel for keying	
8. AUDIO FUNCTION	31
8.1 Overview	31
8.2 AUDIO FOLLOW VIDEO	31
8.3 AUDIO FIXED	32

8.4	AUDIO MENU OPTIONS – DE-EMBEDDING SDI OR HDMI AUDIO	32
8.5	WORKING WITH A FIXED OR SINGLE AUDIO SOURCE	33
8.6	SWITCHING BETWEEN DIFFERENT EMBEDDED AUDIO SOURCES	34
9. T-	-BAR RE-CALIBRATION	35
10.	GPI CONNECTIONS	36
11.	TALLY OUTPUTS	37
12.	SYSTEM DIAGRAM	38
13.	DIMENSIONS	39
14.	SPECIFICATIONS	40
SER'	VICE AND SUPPORT	41

#### **Disclaimer of Product & Services**

The information offered in this instruction manual is intended as a guide only. At all times, Datavideo Technologies will try to give correct, complete and suitable information. However, Datavideo Technologies cannot exclude that some information in this manual, from time to time, may not be correct or may be incomplete. This manual may contain typing errors, omissions or incorrect information. Datavideo Technologies always recommend that you double check the information in this document for accuracy before making any purchase decision or using the product. Datavideo Technologies is not responsible for any omissions or errors, or for any subsequent loss or damage caused by using the information contained within this manual. Further advice on the content of this manual or on the product can be obtained by contacting your local Datavideo Office or dealer.

## **FCC Compliance Statement**

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

- 1. This device may not cause harmful interference, and
- 2. This device must accept any interference received, including interference that may cause undesired operation.

# **Warnings and Precautions**



- 1. Read all of these warnings and save them for later reference.
- 2. Follow all warnings and instructions marked on this unit.
- 3. Unplug this unit from the wall outlet before cleaning. Do not use liquid or aerosol cleaners. Use a damp cloth for cleaning.
- 4. Do not use this unit in or near water.
- 5. Do not place this unit on an unstable cart, stand, or table. The unit may fall, causing serious damage.
- 6. Slots and openings on the cabinet top, back, and bottom are provided for ventilation. To ensure safe and reliable operation of this unit, and to protect it from overheating, do not block or cover these openings. Do not place this unit on a bed, sofa, rug, or similar surface, as the ventilation openings on the bottom of the cabinet will be blocked. This unit should never be placed near or over a heat register or radiator. This unit should not be placed in a built-in installation unless proper ventilation is provided.
- 7. This product should only be operated from the type of power source indicated on the marking label of the AC adapter. If you are not sure of the type of power available, consult your Datavideo dealer or your local power company.
- 8. Do not allow anything to rest on the power cord. Do not locate this unit where the power cord will be walked on, rolled over, or otherwise stressed.
- 9. If an extension cord must be used with this unit, make sure that the total of the ampere ratings on the products plugged into the extension cord do not exceed the extension cord rating.
- 10. Make sure that the total amperes of all the units that are plugged into a single wall outlet do not exceed 15 amperes.
- 11. Never push objects of any kind into this unit through the cabinet ventilation slots, as they may touch dangerous voltage points or short out parts that could result in risk of fire or electric shock. Never spill liquid of any kind onto or into this unit.
- 12. Except as specifically explained elsewhere in this manual, do not attempt to service this product yourself. Opening or removing covers that are marked "Do Not Remove" may expose you to dangerous voltage points or other risks, and will void your warranty. Refer all service issues to qualified service personnel.
- 13. Unplug this product from the wall outlet and refer to qualified service personnel under the following conditions:
  - a. When the power cord is damaged or frayed;
  - b. When liquid has spilled into the unit;
  - c. When the product has been exposed to rain or water;
  - d. When the product does not operate normally under normal operating conditions. Adjust only those controls that are covered by the operating instructions in this manual; improper adjustment of other controls may result in damage to the unit and may often require extensive work by a qualified technician to restore the unit to normal operation;
  - e. When the product has been dropped or the cabinet has been damaged;
  - f. When the product exhibits a distinct change in performance, indicating a need for service.

## Warranty

## **Standard Warranty**

- Datavideo equipment is guaranteed against any manufacturing defects for one year from the date of purchase.
- The original purchase invoice or other documentary evidence should be supplied at the time of any request for repair under warranty.
- Damage caused by accident, misuse, unauthorized repairs, sand, grit or water is not covered by this warranty.
- All mail or transportation costs including insurance are at the expense of the owner.
- All other claims of any nature are not covered.
- Cables & batteries are not covered under warranty.
- Warranty only valid within the country or region of purchase.
- Your statutory rights are not affected.

## **Two Year Warranty**

All Datavideo products purchased after 01-Oct.-2008 qualify for a free one year extension to the standard Warranty, providing the product is registered with Datavideo within 30 days of purchase. For information on how to register please visit www.datavideo.com or contact your local Datavideo office or authorized Distributors.



• Certain parts with limited lifetime expectancy such as LCD Panels, DVD Drives, Hard Drives are only covered for the first 10,000 hours, or 1 year (whichever comes first).

Any second year warranty claims must be made to your local Datavideo office or one of its authorized Distributors before the extended warranty expires.


## **Disposal**



## For EU Customers only - WEEE Marking

This symbol on the product indicates that it will not be treated as household waste. It must be handed over to the applicable take back scheme for the recycling of Waste Electrical and Electronic Equipment. For more detailed information about the recycling of this product, please contact your local Datavideo office.

## 1. Rear Panel

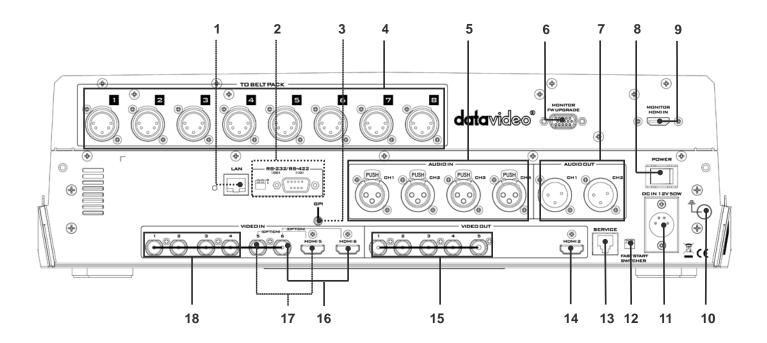


1.	Ethernet Port for PC Control & Updates (TBD)	10.	Grounding Terminal
2.	RS-232/422 Connector & Mini Switch 1 (TBD)	11.	4pin XLR Power Input Connector
3.	GPI Output Connector	12.	Mini Switch 2
4.	TO BELTPACK	13.	Ethernet Port for Load File & Firmware Updates
5.	3pin XLR Audio Inputs 1~4	14.	Multi View Outputs - HDMI
6.	MONITOR F/W Upgrade	15.	Video Output 1~5 – HD-SDI
7.	3pin XLR Audio Outputs 1,2	16.	Input 6 – HD-SDI / HDMI*
8.	Power Switch	17.	Input 5 – HD-SDI / HDMI*
9.	Monitor HDMI Input	18.	Video Input 1~4 – HD-SDI

<sup>\*</sup>Details on input 5/6 are described in "SDI Video Outputs" and "Video Input Modules" of the Rear Panel Connections Section.

#### 1.1 Rear Panel Connections







#### **Ethernet Port**

For remote control interface (TBD).

#### RS-232 / RS-422 Remote

For remote control interface (TBD).



The GPI socket can be used for simple external control.

**Note:** Please enter the HS-2200 MENU to select **GPI SETTINGS** to set up GPI function.



#### TO BELTPACK (For Intercom)

#### **Channel Input / Output XLR Sockets**

Each of the 8 channels has an XLR connector that carries bidirectional signals between the ITC-150 and ITC-100SL. All connections are contained within one cable.




#### **AUDIO Inputs**

Supports four channels XLR Balanced Audio Input.



#### **MONITOR F/W Upgrade**

Socket is for monitor F/W upgrade.



#### **AUDIO Outputs**

Supports two XLR Balanced Audio output channels.



#### **Console Port**

This 9pin D-Sub connector is used to connect the Control Panel / Keyboard to the rear of the HS-2200 Main Processing unit.



#### **POWER SWITCH**

Switches the power On / Off.





The HS-2200 provides a useful connection for confidence monitoring of HDMI sources on location.




#### **Grounding Terminal**

When connecting this unit to any other component, make sure that it is properly grounded by connecting this terminal to an appropriate point. When connecting, use the socket and be sure to use wire with a cross-sectional area of at least 1.0 mm<sup>2</sup>.



#### **DC Input**

Connect the supplied 12V 5A PSU to this 4pin XLR socket.





#### Mini Switch 2

Firmware upgrade switch (The two DIP switches must be set to the UP position).



FAST START SWITCHER

#### **Service Port**

This RJ45 Ethernet port is used for updating the HS-2200 firmware, or uploading logo image.



#### **HDMI Multi-View Outputs**

HS-2200 is capable of achieving multi-view monitoring by connecting multi-view monitor to the HDMI port. The HDMI output can be used for monitoring video and audio in a number of different configurations.

The HDMI connectors are located on the rear panel.

Note: HDMI multi-view output format is 1080i.




#### **SDI Video Outputs**

The five BNC output connectors are user defined SDI outputs. Each of these SDI outputs has the option to be:

- 1. Program
- 2. Program logo free
- 3. Program logo & titles free
- 4. Preview
- 5. Aux1,2,3 or 4
- 6. Multi screen

**Note:** Please enter the HS-2200 MENU to set the **OUTPUT SOURCE**.



#### **Video Input Modules**


The HS-2200 is equipped with six video input channels.

Video Input set is comprised of six SDI connectors and two HDMI ports. The last two channels (#5 and #6) can be switched between SDI connector and HDMI port, i.e. the user is allowed to use CH5 and CH6 for either a SDI source or an HDMI source.

**Note:** The CG (picture and animation) data source is connected to the HS-2200 channels 5 and 6 via HDMI cable and edit CG function on the PC.

**Note:** Please enter the HS-2200 MENU to set the input source for **INPUT 5 AND 6**.


## 2. Control Panel

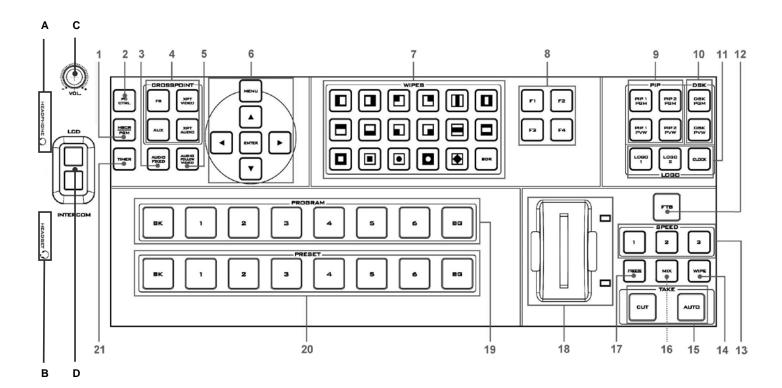

- 1. MSCR PGM
- 2. PC Control
- 3. Audio Fixed
- 4. Cross Point
- 5. Audio Follow Video
- 6. Menu Control
- 7. Transition Selection
- 8. F1~F4 (TBD)
- 9. PIP Selection PVW & PGM
- 10. DSK Selection PVW & PGM
- 11. Logos 1, 2, & Clock
- A. Headphone
- **B.** Headset
- C. Headphone Volume Control
- **D.** LCD / INTERCOM

- 12. FTB Fade To Black
- 13. Speed Selection
- 14. Wipe Function
- 15. Cut & Auto Take
- 16. Mix Function
- 17. Freezes Function
- 18. T-Bar
- 19. Program Row
- 20. Preset Row
- 21. Timer Function

#### 2.1 **Keyboard Controls**

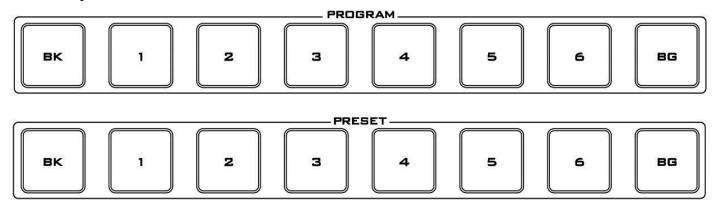

#### **Program and Preset rows**

The Program row of buttons is the active channel, this is the live output. The active channel will appear as the Program Output. You can switch or CUT from one video source to another directly on the Program row. You will see the multi view Program output change as you press different keys along this top row of buttons.

The Preset row is the cued channel; this channel will appear in the Preview window. The Preset row selection decides which input will be transitioned next when using any of the transition controls.

BK Black background – the black background, for use on the Program and Preset row.

BG BG Background button – assigns a background colour or colour bars for use on the Program and Preset row.

> Note: Please enter the HS-2200 MENU and select CONSOLE SETTINGS to set the background colour.


MSCR/PGM MSCR PGM Switch the Multi Screen view or Program view.

Note: This function only works in 1080i mode.

**PC Control** Press this key to control the HS-2200 via computer.

**Audio Fixed** AUDIO Manual selection of a mixed of audio channels fixed to a video channel at your choice.

For more details, please see the **AUDIO FIXED** section.

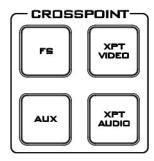

#### FS – Frame Store Button

The HS-2200 CH1~6 video channels, each of these channels has its own Frame Store. Each of these Frame Stores can hold one still image. This still image can be called into the production by using the FS button located at the top left corner of the HS-2200 Control Panel / Keyboard. The FS button allows the user to toggle between the still image of the Frame Store or the live video input also connected to that same video channel.

#### **AUX Source Selection**

The HS-2200 has four user defined AUX SDI output, One or all of these outputs can be set up as an auxiliary (AUX) output via a menu option.

#### The AUX output source can be quickly selected in the following way.

- **1.** First press and hold down the **AUX** button. The Program row of input sources will light.
- **2.** While still holding down the **AUX** button, press the required input on the Program row.
- **3.** The Preset row of input sources will light. While still holding down the **AUX** button, press the required input on the Preset row.
- **4.** The input button will flash to confirm the AUX source is selected.

#### **XPT Video**

Assigning video source, channel setting depending on your selection.

#### The XPT Video source can be quickly selected in the following way.

- **1.** First press and hold down the **XPT VIDEO** button. The Program row of input sources will light.
- **2.** While still holding down the **XPT VIDEO** button, press the required input on the Program row.
- **3.** The Preset row of input sources will light. While still holding down the **XPT VIDEO** button, press the required input on the Preset row.
- **4.** The input button will flash to confirm the audio source is selected.

#### **XPT Audio**

Assigning audio source, channel setting depending on your selection.

#### The XPT Audio source can be quickly selected in the following way.

- **1.** First press and hold down the **XPT AUDIO** button. The Program row of input sources will light.
- **2.** While still holding down the **XPT AUDIO** button, press the required input on the Program row.
- **3.** The Preset row of input sources will light. While still holding down the **XPT AUDIO** button, press the required input on the Preset row.
- **4.** The input button will flash to confirm the audio source is selected.




#### **Audio Follow Video**

Manual selection of one audio channel fixed to one video channel at your choice.


When you select video Channe1, the audio source and the video source will be synchronized on Channel 1.

For more details, please see the AUDIO FOLLOW VIDEO

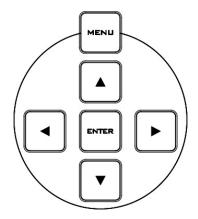

#### Menu Control

Press the **MENU** button in the HS-2200 function section to enter the System Configuration Menu. Press the **UP**, **DOWN**, **LEFT**, and **RIGHT** arrow buttons to navigate the menu options and to change values. Use the **ENTER** button to save and confirm any setting that has been amended.



#### **WIPES**

The HS-2200 has 17 user defined wipe buttons, and a BDR button.

All wipes can have an optional colour border applied. The wipe border width and colour are chosen within the menu system.

Transitions can be performed manually using the T-Bar or automatically by using the **SPEED** and **AUTO TAKE** buttons.





Horizontal Wipes from Centre to Top and Bottom.



Horizontal Wipes from Top and Bottom to Centre.



Diamond Wipe from Centre to outside edges.



Border: Enable / Disable wipe border



#### FUNCTION (F1~F4)

**TBD** 



PVW







When looking at the top right corner of the HS-2200 Control Panel / Keyboard there are four PIP keys. These are labelled Program and Preview. The upper PIP1 and PIP2 keys relate to activating Picture In Picture images on the Program outputs. The lower PIP1 and PIP2 keys relate to activating Picture In Picture images on the Multi-view or Preview outputs.

For more details, please see the **Picture in Picture Function**.



DSK

#### **DSK Preview and DSK Program**

When looking at the top right corner of the HS-2200 Control Panel / Keyboard there are two DSK keys. These are labelled Program and Preview. The upper DSK key relate to activating Down Stream Keying on the Program outputs. The lower DSK key relate to activating Down Stream Keying on the Multi-view or Preview outputs.

Please see the **DSK Function** (page 27) for more details.







#### LOGO 1

The LOGO 1 and LOGO 2 buttons are used to display pre-selected logos on the HS-2200 Preview and Program outputs. When the button is active the selected logo is shown. These logos are selected from the switcher's memory and positioned using a menu option.

#### LOGO 2 or CLOCK

The user cannot display LOGO 2 and CLOCK at the same time. Instead, use LOGO 1 and CLOCK together or use LOGO 1 and LOGO 2 together.



#### **FTB**

Fade To Black, this button fades the current video program source to black. When pressed again it acts in reverse from complete black to the currently selected program video source.



#### **SPEED**


There are three speed buttons which can be defined by the user. By pressing a speed button the user is choosing the rate of transition or time taken when using the AUTO TAKE button.

**Note:** Please enter the HS-2200 MENU and select **CONSOLE SETTINGS** to set up **SPEED BUTTON**.



#### **WIPE**

The WIPE button is selected when a wipe effect transition between the selected Program and Preset sources is required. This WIPE effect is produced by then moving the T-Bar manually or by pressing the AUTO TRANS button.



#### **CUT**

This performs a simple immediate switch from the current main source to the selected sub source. The selected transition wipe or MIX is not used.

#### **AUTO TAKE**

This performs an automated switch from the current program source to the selected Preview source. The selected transition wipe or MIX will also be used. The timing of the transition is set by the chosen Speed button.




#### MIX

Pressing this button selects a basic A/B Dissolve for the next transition.



#### **FREEZE**

Freeze the program source image or return to live video of the selected program source.

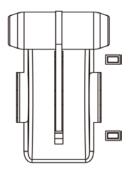

#### T-Bar

This performs a manually controlled transition from the current program source to the selected Preset source. The selected transition wipe or dissolve will be used. When the T-Bar has travelled as far as it can go the transition between sources is complete. The T-Bar has indicators next to it which light when the transition is complete.

The T-Bar can be operated in one of two modes which are chosen by a menu option.



#### **TIMER**

In some mixing or switching applications it is useful to have a countdown timer. It could be that the input is a pre-recorded video clip and you need to know when to be ready to switch away from it.

This countdown timer function is only seen in the status area of the HDMI multi-view output to the right of the normal Clock function. The timer can

be selected for one input channel, several channels or all channels.

When the TIMER button is active and the user switches to a selected input channel the countdown starts on the HDMI multi-view.

The value of the countdown, in minutes and seconds (MM:SS).

When the countdown reaches zero the user can then switch or transition to another input channel. If the countdown reaches zero the switcher will not automatically change to the selected Preset source.

#### Set up the Countdown Settings

- 1. Select one channel of **PRESET** CH1~6
- 2. Press MENU key to enter ON PREVIEW SETTING to set up the COUNT DOWN SETTING.
- **3.** Press **ENTER** key to save your setting, and then exit the **MENU** Mode.
- 4. Press **TIMER** key, and then select one channel of **PROGRAM** CH1~6 (same as step 1 channel setting).

I
ш
>
O
7
I
0
Z
ш
_

#### **Headphone Socket**

1/4" / 6.3mm Stereo Headphone Socket for conventional headphones.



#### **Headphone Socket (HS-2000L or Monitor)**


1/4" / 6.3mm Stereo Headphone Socket for conventional headphones.



#### **Headphone Volume Control**

Control Headphone or Headset volume level.


Use the Headphone section to accurately monitor any of the sources (LCD or INTERCOM).



#### LCD / INTERCOM

Select headphone & speaker audio source from LCD or INTERCOM.

## 3. Intercom & Monitor Control Panel

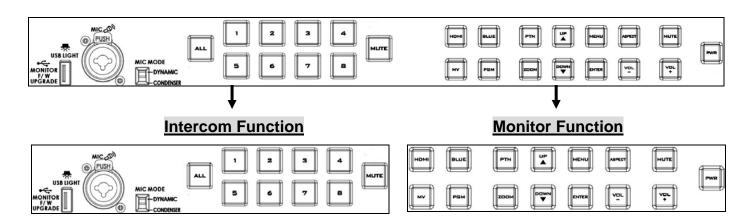


#### 3.1 Intercom Function



#### **USB Port**

USB port for USB LED Light power supply & 17.3" monitor firmware upgrade.



#### **XLR Microphone Socket**

Combined XLR

XLR /  $\frac{1}{4}$ " (6.3mm) Jack Microphone Input for either a Condenser or Dynamic Gooseneck Microphone.

XLR supports Condenser Microphones / 1/2" (6.3mm) Jack supports Dynamic.



#### **ALL Button**

Opens communication with all channels. All channels will hear communication from the operator, or from any other channel using the **TALK** button.



#### Channel Buttons 1~8

Opens communication with individual channels. More than 1 channel can be active at any given time, active channels are illuminated red.

All active channels will hear any communication from the operator or from any other active channel.


The buttons will also indicate if any channel is paging, the paging channel will flash in orange until the page is answered.



#### **MUTE Button**

Mutes all communication from the base station or any channel.

#### 3.2 **Monitor Function**



#### **Source Select Buttons**

Select the type of input you are using - HDMI, MV (multi-view), PGM (program).

#### **BLUE**

Press this button to eliminate the red and green component of input signals. Only the blue component of an input is displayed on the screen. This allows adjustments of chroma and phase. (Phase adjustment is effective with NTSC signals).



#### **PTN**

When pressed displays internally generated SMPTE 75% Colour Bars. Press again to return to the previously selected video input.



#### ZOOM

This feature is designed for use with HD-SDI and HDMI sources above 720p resolution. Press this button to zoom in to the video on the display. This is strictly a zooming function and does not alter the native aspect ratio of the source pixels to fill the screen.

The **ZOOM** button allows you to toggle the Pixel Zoom feature between zoom x1, x2, x4 and x8.





#### **Menu Navigation Buttons**

Display and navigate the set up menus - See Menu Options for more details.





#### **Aspect Ratio Button**

Sets the Aspect Ratio to 16:9 / 4:3





#### **Volume Control**

Adjusts the speaker / headphone volume up / down.

#### **MUTE**

Mutes the audio from the internal speakers or headphone socket.



#### **Power**

Switches the HS-2200 Monitor Power ON / OFF.

## 4. Monitor Menu Options





The HS-2200 Monitor set up via on screen menus. To display the on screen menu press the MENU button.





The menus are navigated using the Up / Down buttons.

Press Enter button to enter or exit the setting mode.

## 4.1 MAIN MENU

Main Options	Sub Options	Parameters	Parameters
•	BRIGHTNESS	0~100	
	CONTRAST	0~100	
	SHARPNESS	0~100	
	SATURATION	0~100	
NAAINI ADUUCT	TINT	0~100	
MAIN ADJUST	BACK LIGHT	0~100	
	NR	HIGH / MID / LOW / OFF	
	MPEG NR	HIGH / LOW / OFF	
	VOLUME	0~100	
	EXIT		
	7500		
	9300		
	6500		
COLOR		RED	0~100
	USER COLOR	GREEN	0~100
		BLUE	0~100
	EXIT		
SCAN SETTING	UNDER SCAN		
JCAN JETTING	OVER SCAN		
	H. FREQUENCY		
INFORMATION	V. FREQUENCY		
IN ORWANON	RESOLUTION		
	VER.		
	English [default]		
	Francis		
	Deutsch		
	Español		
LANGUAGE	Italiano		
	Dutch		
	Português		
	Russian		
	EXIT		1
SPECIAL FUNCTION	OSD TIMEOUT	5-120 SEC	
	FRAME RATIO	90 / 80 / 0FF	
	4:3 MARK LINE	ON / OFF	
	CENTRAL MARK	ON / OFF	
	CINEMA ZONE MARK	ON / OFF	
	AUDIO CHANNEL L*	1/2/3/4	
	AUDIO CHANNEL R*	1/2/3/4	
	EXIT		

#### **FACTORY RESET**

**EXIT** 

#### 4.1.1 MAIN ADJUST

The first menu to be displayed is the MAIN ADJUST Menu.

To access the MAIN ADJUST Menu press enter, the Brightness setting will be highlighted.

To adjust the Brightness press Enter again. Use the Up / Down buttons to change the setting and then press Enter to store the new value and return to the main menu.

To select a different setting (Brightness, Contrast, Saturation, Sharpness, TINT), use the Up / Down buttons. Follow the same procedure to set other values.

#### 4.1.2 COLOR

To access the menu press enter so that Color Adjust option is highlighted

To access the option for the selected color setting, press enter again.

Use the Up / Down buttons to navigate the available color settings.

You can choose: 7500

9300 6500

**USER COLOR** 

#### 4.1.3 Information

The System Information Menu displays Horizontal Frequency, Vertical Frequency, Resolution and the Firmware Version of the monitor.

Once selected, the information will be displayed as follows:

You will see: H. FREQUENCY 33.7KHZ

V. FREQUENCY 60.0HZ RESOLUTION 1920X1080I

VER. 0.11

#### 4.1.4 Special Function

The Special Function Menu has settings for the OSD TIMEOUT, Frame Ratio, 4:3 MARK LINE, Central Mark, Cinema Zone Mark and Audio Channel L & R.

To access the options for the selected setting press enter again, so that the option is highlighted

Use the Up / Down buttons to navigate the available options.

You can choose: OSD TIMEOUT 5-120 SEC

**FRAME RATIO** 90 / 80 / 0FF

4:3 MARK LINE ON / OFF

<sup>\*</sup> Selectable on PGM only; external HDMI and MV are allowed on 1 and 2 ONLY

CENTRAL MARK ON / OFF
CINEMA ZONE MARK ON / OFF

AUDIO CHANNEL L\* 1/2/3/4

#### 4.1.5 Factory Reset

The monitor menu offers a Factory Reset option, which will return all the settings of the monitor to the factory defaults

To reset the monitor press the MENU button and then use the UP / Down button to navigate to FACTORY RESET option. Press ENTER again to reset the monitor. After a few seconds the monitor will be reset.

### 4.2 Monitor firmware update procedure

From time to time Datavideo may release new firmware to either add new features or to fix reported bugs in the current HS-2200 Monitor firmware. Customers can update the firmware themselves if they wish or they can contact their local dealer or reseller for assistance should they prefer this method.

This page describes the firmware update process and it should take *approximately 15 minutes total time to complete*.

#### As well as a working HS-2200 Monitor you will need:

- ➤ The latest firmware update for the **HS-2200 Monitor**.

  This firmware file can be obtained from your local Datavideo office or dealer.
- ➤ USB 2.0 pen drive 128MB or larger with a USB A connector.


Once started *the update process should not be interrupted in any way* as this could result in a non-responsive unit.

#### How to update the firmware

- 1. Unzip / extract the supplied zipped archive or rar folder.
- 2. Wipe the contents of the USB 2.0 pen drive so it is empty.
- 3. Transfer / copy the unzipped / extracted file to the USB 2.0 pen drive; make sure the file name is renamed to MSTFLASH.bin.
- 4. Plug the USB 2.0 pen drive into the USB 2.0 port labelled MONITOR F/W UPGRADE on the front of the monitor button panel.
- 5. Reboot **HS-2200** and the update will be automatically in progress.
- 6. The **HS-2200 Monitor** will reboot itself at the end of the process.

Once started *the update process should not be interrupted in any way* as this could result in a non-responsive unit.

## 5. Menu Options

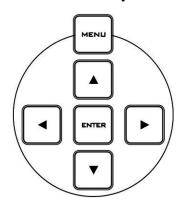

When the **ENTER** button is pressed the Main Menu list is displayed on the HDMI 1 Multi-view output.

This section covers the Menu options in the order that they appear on the HS-2200 HDMI 1 Multi-view. These settings may also appear in more detail elsewhere in this instruction manual. Options may vary depending on the firmware version in use.

Once the chosen setting has been confirmed with the **ENTER** button it is stored within the switchers non-volatile memory.

#### \* This table is under HD 1080i mode values.

Version N <u>o</u>	Firmware version number displayed in xx.xx		
1. Mode	1080i 720p SD 4:3 SD 16:9	 On / Off 	
		Brightness	Range 072 to 184
		Contrast	Range 36 to 92
	Video Input Adjustment	Saturation	Range 36 to 92
	Video input Adjustinent	Aperture	0~3
		Y-C Delay	0~7
		Set to Nominal	On / Off
2. On Preview Settings	Audio Adjustment	Level	-60 / -55 / -50 / -45 / -40 / -35 / -30 / -25 / -20 / -15 / -10 / -5 / 0 / 5 / 10 / 15 / 20 / 25 / 30 / 35 / 40 / 45 / 50 / 55 / 60
		Set To Nominal	On / Off
	Count Down Settings	Down Counter is on	On / Off
		Count Down Value	00:01 ~ 60:00
		SDI	On / Off
		HDMI	On / Off
3. Input 5 and 6 Mode	Input 5 Input 6	HDMI Color Mode	RGB
3. Iliput 3 allu 0 ivioue			YUU_422
			YUV_444
			TC-200 Mode
4. Outputs Sources	Output 1~6	Output 1~6 can be assigned to one of the following:  Program  Program Logo Free  Program Logo & DSK Free  Preview  Aux 1~4  Multi-Screen	

5. Aux Selection	AUX 1~4	1~6
------------------	---------	-----

Note: Each input can be selected for **Count Down** ON or OFF. If **Count Down** is ON then the **Down**Counter value is set in minutes and seconds (MM:SS), **Max** = 1 Hour or 60:00, and **Default** = 15 seconds or 00:15


	Dynamic Range (dB)	18 or 24	
	Audio Cross Point	Button 1~6	1~6
	CDLD - FAAD A -I'- C-I	1	Group 1~4
	SDI De-EMB. Audio Setup	Input 1~6	Pair 1,2
6. Audio Settings	HDMI De-EMB. Audio Setup	Input 5,6	1~4
	Audio (Re)-Embedding Setup	Output 1~6	1~4
		X-Type, V-Type	·
	Audio Mixing Type	X type = A/B cross fa	de
		V type = Fade out A t	hen fade in B
		Horizontal Position	000~107
	PiP1	Vertical Position	000~108
7. PIP Settings	PiP1	Window Size	01~33
	1112	Border Width	00~05
		Border Color	01~08
	10004	Logo Selection	001~008
8. LOGO Settings	Logo1 Logo2	<b>Horizontal Position</b>	000~110
	Logoz	Vertical Position	000~124
	Horizontal Position	000~110	
	Vertical Position	000~124	
9. Clock Settings	Set Hours	0~24	
	Set Minutes	0~59	
	Clear Seconds	On / Off	
	DSK	On / Off	
10. DSK Settings	Luma Key Mode	On / Off	
	Luma Key Level	Luma Key Level 0 (black) to 255 (white)	
11 Wine Perder Cettings	Wipe 1~17	Width	0~4
11. Wipe Border Settings		Color	1~8
	Multi Screen Mode	Variant A/ B/ C	On / Off
12. Multi Screen Setting	Multi Screen Audio Setup	Preview/ Program	On / Off
	Multi Screen Audio Indicator		On / Off
	T-Bar Audio Mixing Type	Follow T-Bar / By the	
	T-Bar Mode	One Way Mode / Tw	1
13. Console Settings	Speed Button Setting	Speed 1 / 2 / 3	4~64
	B/Ground: 1~8=Color; 9=Bars		1~9
	Button Settings	Brightness	001~004
		Backlight is On	On / Off
	1kHz to COLOR BAR		On / Off
14. GPI Settings	Input Select	0~6 GPI Select by CH1~6 (0 = GPI function disable)	

	Time Delay	01~99	01~99	
		Delay time ca	an be set at 01~99 frame	
	1. MODE	LEVEL	On / Off	
		PULSE	On / Off	
15. Remote Control	Ethernet	On / Off		
	DVIP board	On / Off	On / Off	
16. Factory Settings	Check to enable = Reset all settings to default values.			

#### 6. How to use the CG-200 software with HS-2200

#### For example:

1. Use an HDMI cable to connect the PC to the HS-2200 (CH-6).

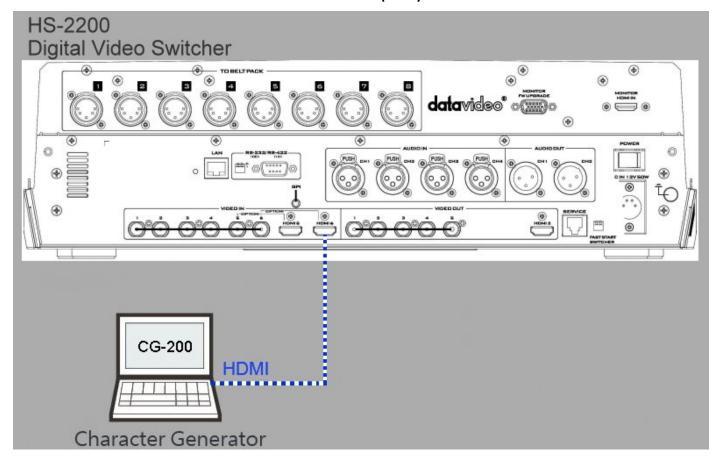

2. Enter HS-2200 Main Menu to set Video Standard.

	1080i	
1. Mode	720p	Set the video to the desired standard.
1. Mode	SD 4:3	set the video to the desired standard.
	SD 16:9	

3. Enter HS-2200 Main Menu to set Video Input 6 to HDMI.

3. Input 5 and 6 Mode	Input 5 Input 6	SDI	On / Off
		HDMI	On / Off
			RGB
			YUU_422
		HDMI Color Mode	YUV_444
			TC-200 Mode

- 4. Activate DownStream Key on HS-2200 Control Keyboard. Please see the section on <u>DSK Function</u> for more details.
- 5. Install the CG-200 software on the PC.

Step1: Please click the



icon to install CG-200 Software

**Step2:** Install the CG software Step by Step till it is complete.







**Step3:** When finished, please double click the

CG-200 icon to execute the software.

6. Click Settings → Preferences to select Video Mode (the video mode must the same as HS-2200).

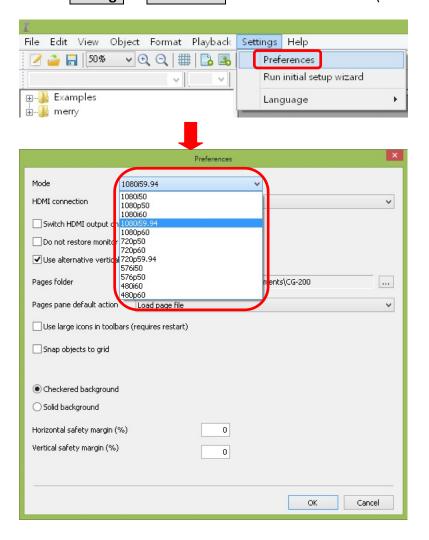


7. Select DEMO file to play the CG data (the video standard must the same as HS-2200).

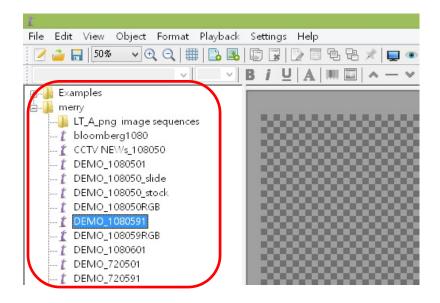

8. Set HDMI output to "ON".




9. Enter "Play all" to enable CG function.

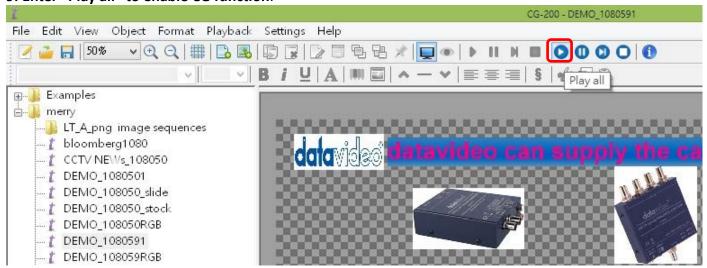

## 7. HS-2200 Video Layers

The HS-2200 is a Standard Definition or High Definition Digital Video Switcher as well as mixing video and audio sources. It has additional functions such as Picture in Picture (PIP), DSK LUMA KEY and LOGOs.

Before attempting to use the HS-2200's PIP, DSK LUMA KEY and LOGO functions it may help to first understand the order of the video layers at the HS-2200 Program (PGM) outputs.

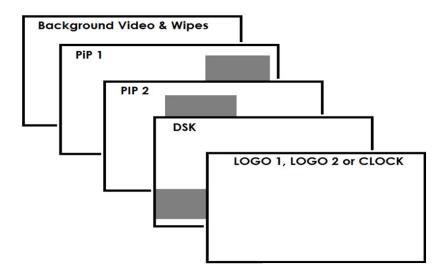

The **Background video layer** is the normal video layer when mixing and switching with the HS-2200. It occupies the whole screen area of the Program output. This layer can be hidden or partly hidden by the PIP, DSK and LOGO layers in front of it.

The **PIP 1 layer** does not occupy the whole screen and is shown in front of the Background video layer when enabled. In some setups the PIP 1 image can be hidden behind the PIP 2 image. This is not a fault. Change the position or size of the PIP 1 or PIP 2 image if required.

The **PIP 2 layer** does not occupy the whole screen and is shown in front of the Background video and PIP 1 layers when enabled. In some setups the PIP 1 image can hide the PIP 2 image. Change the position or size of the PIP 2 or PIP 1 image if required.

The **DSK layer** can occupy the whole screen. If set up incorrectly this layer can stop the video layers behind it from being seen properly. Re-adjust your DSK 1 settings or switch off the DSK1 function on the HS-2200 to restore the video behind it.

The **LOGO** and **Clock layer** does not occupy the whole screen and all other layers are visible through it. A logo if positioned incorrectly can partially hide an important part of the video, PIP or CG LUMA KEY layers. Typically logos or station ID bugs are placed in a corner of the screen.

**NB:** Where possible prepare and position the upper video layer elements in advance of the live production starting to avoid them appearing on the program output incorrectly.

Most broadcast networks have guidelines and advice on the use of video, images, music, logos and on screen text so it is best to check beforehand when planning a production. Do not use copyright protected content until you have the relevant permissions. Information on royalty free video, images and music is widely available, speak to your local dealer or search for advice on the internet.

#### 7.1 Picture in Picture Function

The HS-2200 Picture in Picture function allows you to place one or two smaller PIP images over a chosen full size background image. The smaller PIP images can be set to pre-defined sizes and positioned almost anywhere within the Preset/Program screen area. These PIP windows can also have a coloured border applied, and can be brought into the production with a default PIP dissolve transition.

#### 7.1.1 PIP Settings

Before trying to activate the PIP function it is best to understand how to set up or choose the right options for your production. Press the **ENTER Key** in the **MENU** area of the HS-2200 keyboard. Navigate to the **PIP Settings** option using the down arrow key. The PIP menu options provided here are:

		<b>Horizontal Position</b>	= 000 to 107 (Left to right)
	PIP1	Vertical Position	= 000 to 108 (Lower to Upper)
DID Cottings	PIPI	Window Size	= 1 (small) to 33 (large)
PIP Settings	PIP2	Border Width	= 0 (OFF), 1 (Thin) to 5 (Thick)
	PIPZ	Border Color	1 = White, 2 = Yellow, 3 = Light Blue, 4 = Green,
			5 = Purple, 6 = Red, 7 = Dark Blue, 8 = Black.

#### 7.1.2 PIP Preset and PIP Program

When looking at the top right corner of the HS-2200 Control Panel / Keyboard there are four PIP keys. These are labelled Program and Preset.

The upper PIP1 and PIP2 keys relate to activating Picture In Picture images on the Program outputs.

The lower PIP1 and PIP2 keys relate to activating Picture In Picture images on the Multi-view or Preview outputs.

#### 7.1.3 Assigning a video source input to a PIP

Using the lower PIP1 or PIP2 buttons you can assign a selected video input to the chosen PIP video layer.

- 1. First press and hold down the required PIP button on the lower row. The Preset row of input sources will light.
- 2. While still holding down the PIP button, press to select the required input from the Preset row.
- **3.** The input will flash to confirm it is selected.

This selection will also be confirmed on the HDMI Multi-view, with a P1 or P2 label shown next to the selected input image.

#### 7.2 DSK Function

The HS-2200 has two Down Stream Keys (**DSK PGM, DSK PVW**). This means it is able to take a key source video input and replace the white or black parts of this image with the video from another source. If the input video carries an alpha channel it is also possible to key in this way too.

#### 7.2.1 DSK Settings

Before trying to activate the DSK function it is best to understand how to set up or choose the right options for your production well in advance of the production.

Press the **ENTER Key** in the **MENU** area of the HS-2200 keyboard. Navigate to the **DSK Settings** option using the down arrow key. The DSK menu options provided here are:

	Titles + α Channel	
DSK Settings	Luma Key Mode	
	Luma Key Level	Luma Key Level 0 (black) to 255 (white)

#### 7.2.2 DSK PVW and DSK PGM

When looking at the top right corner of the HS-2200 Control Panel / Keyboard there are two DSK keys. These are labelled Program and Preset.

The upper DSK PGM key relates to activating Down Stream Keying on the Program outputs.

The lower DSK PVW key relates to activating Down Stream Keying on the Multi-view or Preview outputs.

#### 7.2.3 Assigning an input to a DSK PVW channel for keying

Using the lower DSK PVW button you can assign a selected video input to the chosen DSK video layer.

- 1. First press and hold down the DSK PVW button on the lower row. The Preset row of input sources will light.
- 2. While still holding down the DSK PVW button, press to select the required input from the Preset row.
- **3.** The input will flash to confirm it is selected.


This selection will also be confirmed on the HDMI Multi-view, with a T1 label shown next to the selected input image.

#### 8. AUDIO Function

#### 8.1 Overview

The HS-2200 has the ability to take audio from several sources such as XLR analogue, SDI and/or HDMI inputs. The audio can be embedded onto the HDMI and SDI outputs and/or fed to the analogue XLR audio connections.

When using the audio functions of the HS-2200 switcher you may de-embed audio from selected SDI or HDMI inputs and then output this audio from the XLR outputs of the switcher to a separate audio mixer like the Datavideo AM-100 audio mixer.

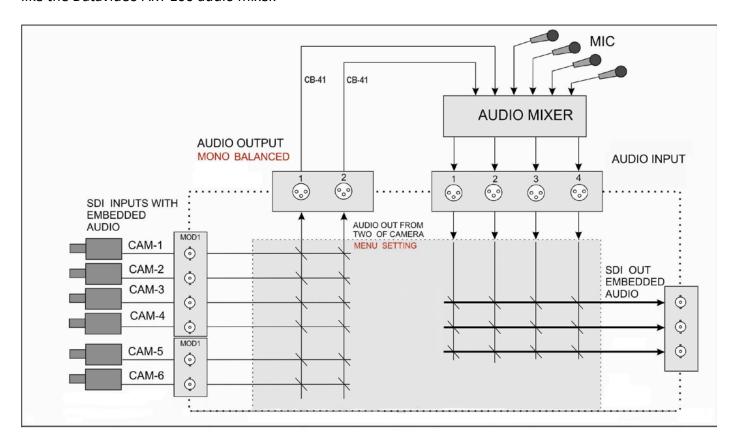

Once the audio is mixed externally with any microphones or audio sources it can then be fed back into the HS-2200 on the analogue XLR inputs. The HS-2200 can then embed this externally mixed audio on to the Program SDI outputs.

#### 8.2 AUDIO FOLLOW VIDEO



**AUDIO FOLLOW VIDEO** function is also known as audio follow video. This means that the audio source will switch with the corresponding video input, and actually follow the T-bar function. The active audio is deembedded and sent to the audio output terminals for processing and/or audio levelling/ and or adding more audio sources. The resulting audio will return and be connected to the audio inputs for the purpose of (re)-embedding the audio to the SDI output. The selection of the audio groups determines the SDI channel that the audio will be embedded to exactly.

**AUDIO FOLLOW VIDEO** function is primarily used in talk show or live news broadcasting. Voices of different guests are directly collected by the corresponding cameras, thus, when the program director switches

between different guests, the video is switched at the same time with voice of the guest during program broadcasting. This function is definitely an indispensable function during live broadcasting.

#### 8.3 AUDIO FIXED



The **AUDIO FIXED** method, allows a user to manually select which audio input can be matched to the SDI video input and assigned to the audio output terminals, which is shown in the example below:

The table below illustrates that the sound of video input 1 is used for all individual video inputs.

	HS-2200 Audio INPUT Channel	HS-2200 Assigned Audio Output Channel
	INPUT 1 (BUTTON 1)	1
	INPUT 2 (BUTTON 2)	1
AUDIO ASSOCIATIONS	INPUT 3 (BUTTON 3)	1
AUDIO ASSOCIATIONS	INPUT 4 (BUTTON 4)	1
	INPUT 5 (BUTTON 5)	1
	INPUT 6 (BUTTON 6)	1

The **AUDIO FIXED** function is mainly used in big (concert) events and (wedding) parties. One camera picks up the audio of the audience and/or ambience of that video input 1, which is assigned to be sent to the audio output. The other cameras are assigned to this same audio of video input 1. When the operator switches between the video sources, the sound of video input 1 remains on all the time.

#### 8.4 Audio Menu Options – De-embedding SDI or HDMI audio

Using the following HS-2200 menu options audio can be selected from the SDI or HDMI video inputs.

SDI De-EMB. Audio Setup	Inputs 1 to 6	User choice of	<b>Group</b> 1,2,3 or 4 <b>Pair</b> 1 or 2
HDMI De-EMB. Audio Setup	Input 5 or 6	User choice of	<b>Pair</b> 1,2,3 or 4

As each SDI / HD-SDI source can have up to sixteen channels of audio, and HDMI eight channels, we need to choose the audio channels with the options above and by the following reference tables.

SDI Inputs Embedded Audio		
Group Stereo Pair Channel		
Group 1	Storee mair 1	1
	Stereo pair 1	2
	Stereo pair 2	3
		4
Group 2	Stereo pair 3	5
		6

	Stereo pair 4	7
		8
	Storoo nair E	9
Croup 2	Stereo pair 5	10
Group 3	Stereo pair 6	11
		12
Group 4	Storoo pair 7	13
	Stereo pair 7	14
	Classa sais 0	15
	Stereo pair 8	16

HDMI Inputs Embedded Audio		
Stereo Pair	Channel	
Ctoroo noir 1	1	
Stereo pair 1	2	
Stereo pair 2	3	
	4	
Stereo pair 3	5	
	6	
	7	
Stereo pair 4	8	

In some cases there may only be two channels of audio associated with the video: Stereo Pair 1.

#### 8.5 Working with a fixed or single audio source

#### Example 1:

We have two mono mics (channels 1 & 2) connected to an HD camera. These embedded audio channels are then sent from the output of this camera (HD-SDI) to the HS-2200 switcher. If we want to only hear these two audio channels regardless of the video channel used then we would set up the switcher in the following way.

Press the ENTER key in the MENU area of the HS-2200 keyboard to display the on screen menu on the AUDIO **ASSOCIATION** of **AUDIO SETTING**.

Change the Audio Association settings in the menu system to show a value of 1 for each video input channel. Press the ENTER key to store the audio values chosen for each video input.

Change the SDI Embedded Audio setting in the switcher's menu system to show a value of Group 1 and Pair 1. Press the ENTER key to store the audio values chosen for each video input.

Now exit the menu by pressing any wipe key and look at the **AUDIO FIXED** button in the wipes area of the keyboard.

Select the **AUDIO FIXED** status with this button when looking at the status area of the HDMI multi-view. The button will be backlit red.

#### 8.6 Switching between different embedded audio sources

#### Example 2:

We have two mono mics each connected to a different HD camera. The embedded audio is then output from each camera, HD-SDI, to the HS-2200 switcher. If we want to hear the audio from each camera as the video channels are switched, **audio follows video**, and then we would set up in the following way.

Press the ENTER key in the MENU area of the HS-2200 keyboard to display the on screen menu on the AUDIO **ASSOCIATION** of **AUDIO SETTING**.

Change the **Audio Association** settings in the menu system to show a value of 1 for each video input channel that is associated with audio input 1. Then change to a value of 2 each video input channel that is associated with audio input 2. Press the **ENTER** key to store the audio values chosen for each video input.

Change the **SDI Embedded Audio** setting in the switcher's menu system to show a value of Group 1 and Pair 1. Press the **ENTER** key to store the audio values chosen for each video input.

Now exit the menu by pressing any wipe key and look at the **AUDIO FIXED** button in the wipes area of the keyboard.


Select the **AUDIO FOLLOW VIDEO** status with this button when looking at the status area of the HDMI multi-view. The button will be off. The status area is located just below or near the Preset image on the HDMI multi-view monitor.

When switching between the video sources the audio sources will also change. We can choose how the audio will change sources, whether it is a clean cut (immediate switch) or some sort of transitioned change (cross fade or fade out & in). To do this we would need to set up with the following menu options.


Auto Audio Mixing Type	User choice of	X type or V type Tick selection	X type = A/B cross fade V type = Fade out A then fade in B
T-Bar Audio Mixing Type	Tick selection of		mixing type (use above option) cut or immediate audio switch)

### 9. T-Bar Re-Calibration


After a firmware update of the switcher it will be necessary to re-calibrate the T-Bar to get it working correctly.




1. Move the **T-Bar** to its **lowest position**.





2. Power OFF the HS-2200 switcher.






4. **Power ON** the HS-2200 switcher while **still holding down the buttons** in step 3.







6. Move the **T-Bar to its top position** and then press the **CUT** button.





7. Move the **T-Bar back to its lowest position** and then press the **AUTO TAKE button**.




- **8.** To exit the calibration procedure, press the **CLOCK button**.
- 9. Ensure the **TIMER button** is **OFF**.
- 10. Test the T-Bar.
  If necessary change the T-Bar Mode in the OSD MENU options.

#### 10. GPI Connections

The HS-2200 can control external recorder/playback devices like the HDR-60/70 via simple contact closure GPI switch.

The GPI interface is a 3.5mm Jack Socket which is situated on the rear panel of the HS-2200. Contact closure between the Outer and Inner contacts on the jack plug will trigger a user selected event. Power is supplied by the HS-2200 and is less than 5V DC.

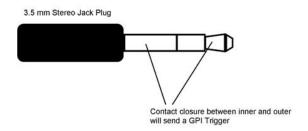

This GPI socket can also be used as a socket to trigger record or playback events with other equipment such as the Datavideo HDR-70 recorder.


<u>SAFETY FIRST</u> The cabling required needs to be designed specifically to connect the HS-2200 to the chosen record or playback device as they are not all the same. The cabling required can be made by yourself or a competent technician. Please speak with your Dealer or local Datavideo office to get further help and advice.

## 11. Tally Outputs

The HS-2200 has a D-sub 25 pin female tally output port. These connections provide bi-colour tally information to a number of other Datavideo products, such as the ITC-100 eight channel talkback system and the TLM range of LCD Monitors.

These ports are open collector ports and as such do not provide power to tally light circuits.


Dielectric strength: Max. DC 24V Current: Max. 50mA




(D-sub 25-Pin Female)

The pin outputs are defined as follows:


Pin No.	Signal name	Input/Output	Description of signal
1	Program 1	Open collector output	Tally output of input video Program 1
2	Program 2	Open collector output	Tally output of input video Program 2
3	Program 3	Open collector output	Tally output of input video Program 3
4	Program 4	Open collector output	Tally output of input video Program 4
5	Program 5	Open collector output	Tally output of input video Program 5
6	Program 6	Open collector output	Tally output of input video Program 6
13	GND	Ground	Ground
14	Preview 1	Open collector output	Tally output of input video Preview 1
15	Preview 2	Open collector output	Tally output of input video Preview 2
16	Preview 3	Open collector output	Tally output of input video Preview 3
17	Preview 4	Open collector output	Tally output of input video Preview 4
18	Preview 5	Open collector output	Tally output of input video Preview 5
19	Preview 6	Open collector output	Tally output of input video Preview 6

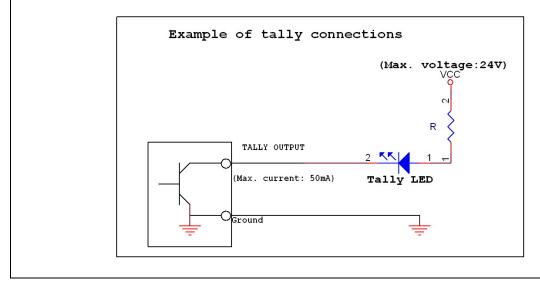



## 12. System Diagram

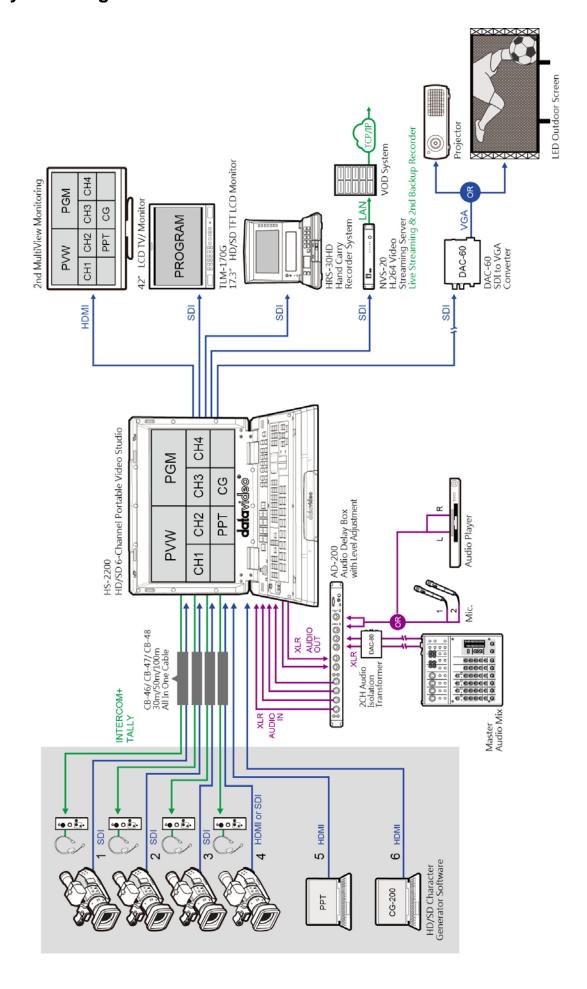

# 13. Dimensions

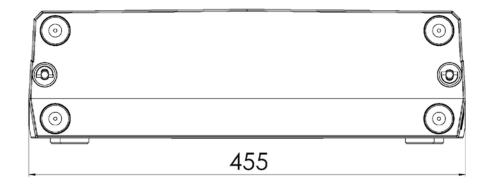

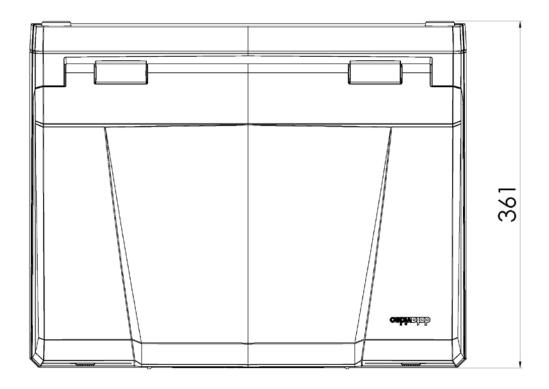

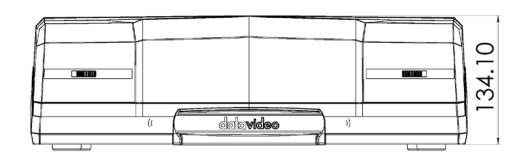

# 14. Specifications

Connections		
Total Video Inputs	Total 6 video inputs (6 SDI or 4 SDI + 2 HDMI)	
Total Outputs	Total 6 SDI video outputs + 2 HDMI Multi view outputs	
Multi view Out	HDMI	
SDI Video Input	Max 6 (BNC 75 Ohm)	
HDMI Video Input	Max 2	
Analog Audio Output	2 mono (1 stereo)	
SDI Audio Output	SDI Embedded Audio	
Analog Audio Input	4 mono (2 stereo)	
Internal Frame Synchronizers	6 Frame Synchronizers	
PGM Out	Up to 6	
Multi view Out	HDMI x 2 (HDMI multi-view outputs format is 1080i)	
AUX output	up to 4 outputs	
Control Panel Connection	RS-232	
Tally Out	YES	
GPI	YES	
Software Updates	via Ethernet	

Standards		
HD Format Support	1080i50, 1080i59.94, 1080i60, 720p50, 720p59.94, 720p60	
Video Sampling	4:2:2 10 bit	
Color Precision	4:2:2 10 bit	
Color Space	SDI - YUV, HDMI - YUV / RGB	
HDMI Input Resolutions for	HDMI 1920x1080i/50Hz HDMI 1920x1080i/60Hz	
Computers	HDMI 1920x1080i/59.94Hz HDMI 1280x720p/50Hz	
SDI Input Resolutions for	1920x1080i/50Hz, 1920x1080i/60Hz, 1920x1080i/59.94Hz	
Computers	1920X10801/30H2, 1920X10801/60H2, 1920X10801/39.94H2	

Extras	
Downstream Key	1; Support Luma and Linear Key
Color Generators	BARS, COLOR BG
PIP	2
XPT	YES
Frame store	YES
Control Panel Compatibility	Use PC via Ethernet / Control panel by RS-232
Input Voltage	DC12V
Power consumption	32W
DE-embedded audio sampling	48KHz
S/N : analog, digital to analog	>-72dB

Multi View Monitoring	
Number of Windows	2+6 (3 layout)
Tally	YES
Windows Source Labels	YES

## Service & Support

It is our goal to make owning and using Datavideo products a satisfying experience. Our support staff is available to assist you to set up and operate your system. Contact your local office for specific support requests. Plus, please visit www.datavideo.com to access our FAQ section.

#### **Datavideo Taiwan**

Datavideo Technologies Co. Ltd 10F. No. 176, Jian 1st Rd., Chung Ho District, New Taipei City 235, Taiwan, R.O.C.

Tel: +886-2-8227-2888 Fax: +886-2-8227-2777

E-mail:service@datavideo.com.tw

#### Datavideo USA

Datavideo Corporation 7048 Elmer Avenue. Whittier, CA 90602, U.S.A.

Tel:+1-562-696 2324 Fax:+1-562-698 6930 E-mail:sales@datavideo.us

#### **Datavideo Hong Kong**

Datavideo Hong Kong Ltd G/F.,26 Cross Lane Wanchai, Hong Kong Tel: +852-2833-1981 Fax: +852-2833-9916

E-mail:info@datavideo.com.hk

Datavideo Europe

Datavideo Technologies Europe BV Floridadreef 106 3565 AM Utrecht, The Netherlands Tel:+31-30-261-96-56 Fax:+31-30-261-96-57 E-mail:info@datavideo.nl

#### Datavideo China

Datavideo Technologies China Co 101,NO.618,LiuYing Rd,Zhabei District, Shanghai,China

Tel: +86 21-5603 6599 Fax: +86 21-5603 6770 E-mail:service@datavideo.cn

#### **Datavideo France**

Datavideo France s.a.r.l Cité Descartes 1,rue Albert Einstein Champs sur Marne 774477-Marne la Vallée cedex 2 Tel:+33-1-60370246 E-mail: info@datavideo.fr

#### **Datavideo United Kingdom**

Datavideo UK Limited Units1 & 2 Waterside Business Park Hadfield, Glossop, Derbyshire SK13 1BE, UK Tel:+44-1457 851 000 Fax:+44-1457 850 964 E-mail:sales@datavideo.co.uk

#### **Datavideo Singapore**

Datavideo Technologies (S) PTE Ltd No. 178 Paya Lebar Road #06-03 Singapore 409030

Tel:+65-6749 6866 Fax:+65-6749 3266 E-mail:sales@datavideo.sg

#### **Datavideo India**

Datavideo Technologies India Pvt Ltd A-132, Sec-63,Noida-201307, Uttar Pradesh (UP), India. Tel:+91-0120-2427337 Fax:+91-0120-2427338 E-mail: sales@datavideo.in



Please refer to our website for update the latest version manual. www.datavideo.info/Mobile+Studios/HS-2200

